

Mobileye 8 connect

Alerts configuration user guide



Table of Contents

TABLE OF CONTENTS	2
1. INTRODUCTION	3
2. ACCESSING THE ALERT CONFIGURATION	4
3. SET VALUES	6
3.1 FCW	7
3.2 LDW	8
3.3 HMW	8
3.4 VOLUME	11
3.4.1 GENERAL VOLUME LEVEL	11
3.4.2 LDW VOLUME LEVEL	12
3.4.3 HMW VOLUME LEVEL	12
3.5 SLI	13
3.6 IHC	14
3.7 BLINKER REMINDER	15
3.8 SYSTEM ON/OFF	16
3.9 PILOT MODE	16
3.10 MUTE BY AUX – POLICE MODE	17
3.11 VIRTUAL BUMPER	17

1. Introduction

The Alerts Configuration app enables easy & quick modification of Mobileye system settings, features` s sensitivity levels and advanced configurations.

The user can lock / limit certain values of the different alerts.

Depending on the existing firmware version, see available alerts configuration features in the table below:

Feature		AWS4 4.18.11_2.4	AWS4 4.19.6_4.4 and up	AWS4 4.19.6_5.x and up	AWS4 4.19.6_5.x and up
Set FCW sensitivity level		x	✓	✓	✓
LDW	Set sensitivity level	x	✓	✓	✓
	Set volume level	✓		✓	✓
	Set activation speed	✓		✓	✓
HMW	Set sensitivity level	✓	✓	✓	✓
	Set volume level	✓		✓	✓
R-HMW	Set sensitivity level	x	x	✓	✓
Set general volume level		✓	✓	✓	✓
enable/disable SLI visual alert		✓	✓	✓	✓
Enable/disable IHC and activation speed		x	✓	✓	✓
Set Blinker Reminder alert timing		x	✓	✓	✓
Enable/disable power button		✓	✓	✓	✓
Enable/disable pilot mode		✓	✓	✓	✓
Mute by AUX (police mode)		x	x	✓	✓
Virtual Bumper		x	x	x	✓*

* Supported with Mobileye IC V8.8.0.0

- When limit any of the available alerts/feature's settings will limit the driver`s ability to change sensitivity and/or volume level within a specific range.
- Not using the alerts configuration application for the Mobileye 8 connect will leave the factory default settings.
- To check the installed firmware version, refer to page 5 @ "Connect to SeeQ" slide.
- IHC (Intelligent High-Beam Control) feature requires physical connection which must be made during the installation process.
For more information about IHC connection step, check the IHC manual which can be found at Mobileye FPT website.

NOTE →


All future Alert configuration app releases will include the latest features

2. Accessing the Alert configuration


The Alert configuration application is part of the Installation Center (IC).

The application is optimized for a standalone Mobileye 8 connect system or as the master unit as part of the shield+ V4 system.

To run the alerts configuration application, open the Installation Center and click on the icon (as shown in the image below):

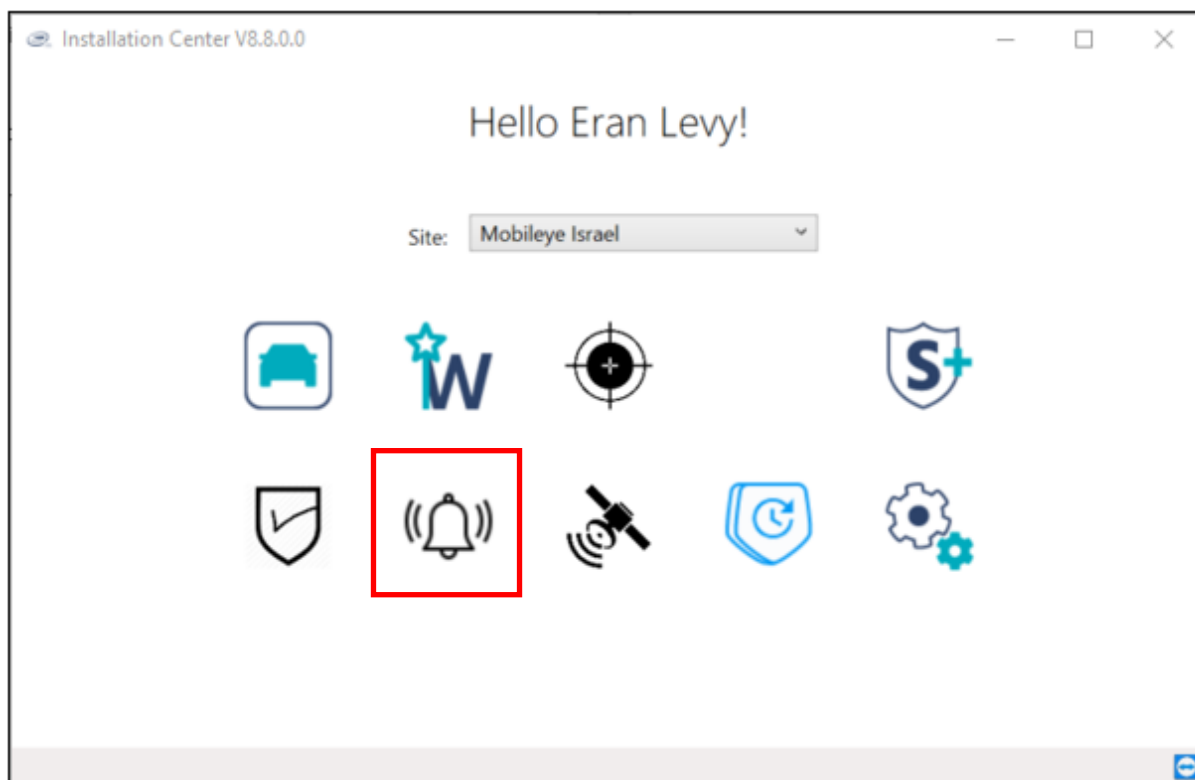

Establish communication with the system and click "Next" to continue

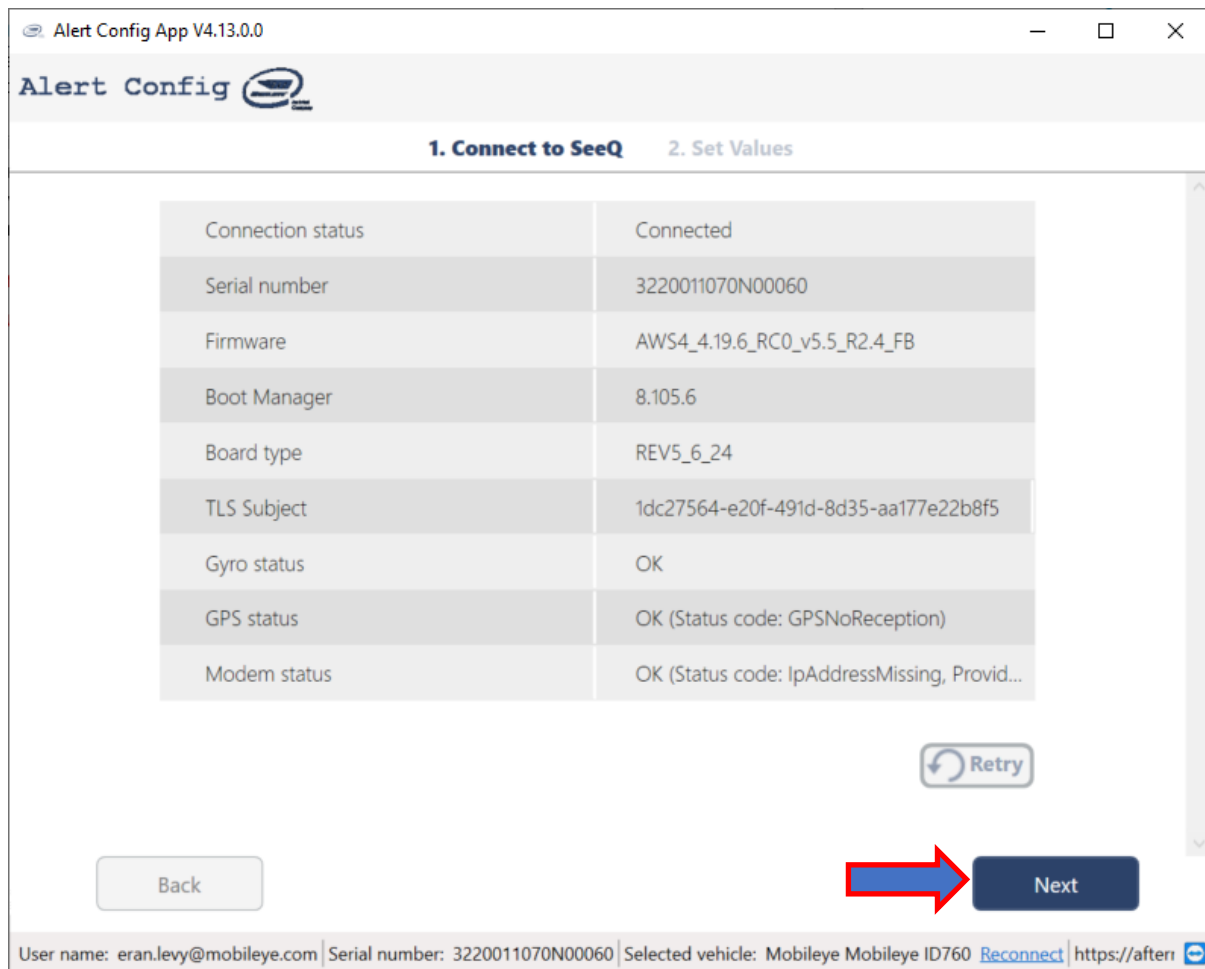

The screenshot shows the 'Alert Config App V4.13.0.0' window. It has a title bar with standard window controls. Below the title bar is a header with the 'Alert Config' logo and two tabs: '1. Connect to SeeQ' (active) and '2. Set Values'. The main content area displays a table with system information. Below the table are 'Back', 'Retry', and 'Next' buttons. A red arrow points to the 'Next' button. At the bottom, a status bar shows user and vehicle information, with a 'Reconnect' link and a URL. A red arrow points to the 'Reconnect' link.

1. Connect to SeeQ 2. Set Values	
Connection status	Connected
Serial number	3220011070N00060
Firmware	AWS4_4.19.6_RC0_v5.5_R2.4_FB
Boot Manager	8.105.6
Board type	REV5_6_24
TLS Subject	1dc27564-e20f-491d-8d35-aa177e22b8f5
Gyro status	OK
GPS status	OK (Status code: GPSNoReception)
Modem status	OK (Status code: IpAddressMissing, Provid...

Back Retry Next

User name: eran.levy@mobileye.com | Serial number: 3220011070N00060 | Selected vehicle: Mobileye Mobileye ID760 [Reconnect](#) | <https://aftern>


If communication fails, check the following:



- System power status
- EyeNET flex cable connection is connected and stable
- Ethernet cable is connected between the EyeNET and the ethernet port in the computer.


Click "Reconnect" to re-establish communication and click "Next to continue.


3. Set values

The Alert configuration application main screen divided to rectangles to separate between the different features.


For each feature, a round question mark  can be found in the top right corner. By hovering over the icon, a dialog box will pop up with basic information and instructions.

For each feature, a round circle checkbox  can be found in the top right corner to indicate if a change has been made .

Upon completion of the desired configuration, click the  button to save and burn the new changes to the system.

Click the  button to read and display the current settings of the system.

A system power is mandatory for the changes to take effect.

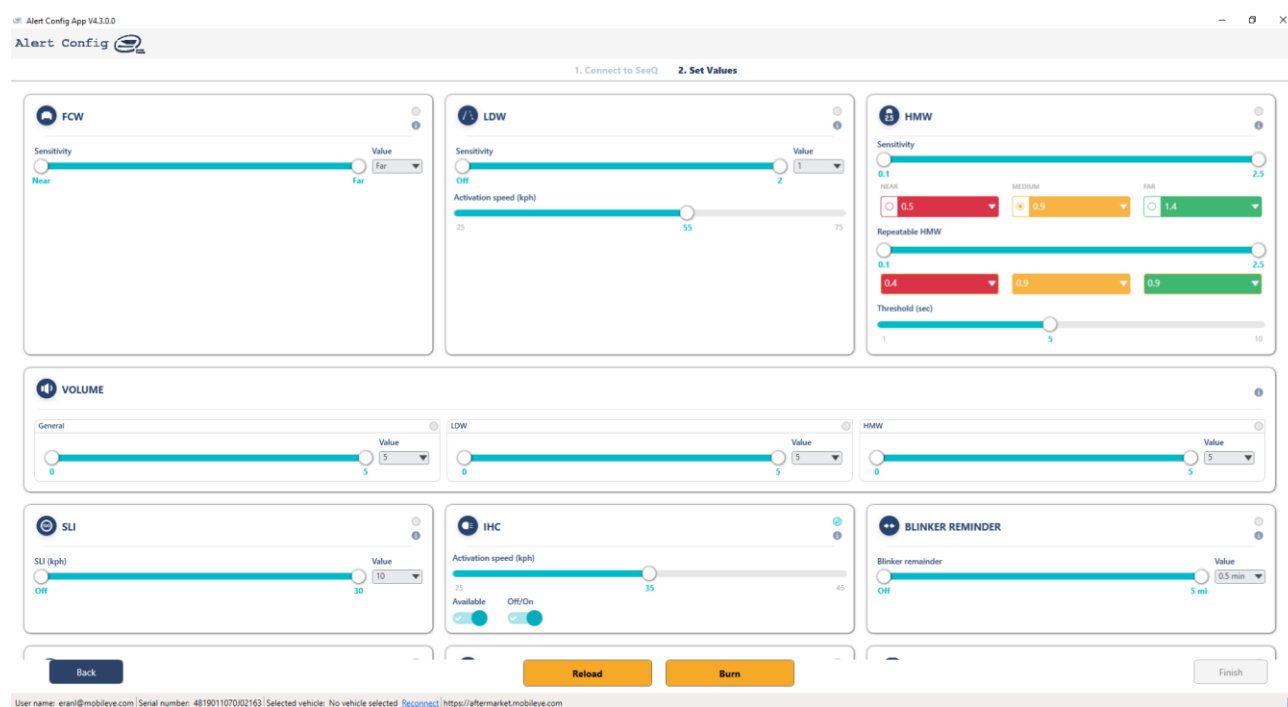


3.1 FCW



- ① Move the scroll bar and choose to limit the FCW sensitivity level.

This will limit the user's ability to adjust the sensitivity level within the chosen range.

Example:

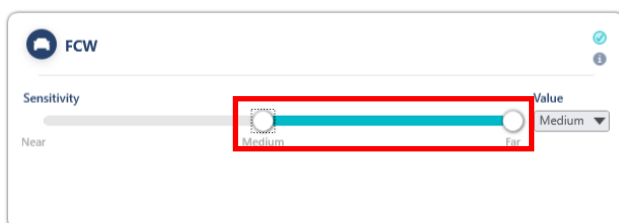

Limit the sensitivity level between Medium to Far will allow the user to change the sensitivity level only between these ranges and not to Near sensitivity level.

- ② The "Value" drop-down will display the default value which currently exists in the system.

To change this value, open the drop-down and choose the desired value.



3.2 LDW



- ① Move the scroll bar to limit the LDW sensitivity level. The 3 levels of sensitivity are:
 - Level 0 = feature is disable
 - Level 1 = feature is active
 - Level 2 = feature is active at the highest sensitivity level
 - By setting both min & max to the same value, LDW feature will be set to this specific sensitivity level.
 - Setting different values for min & max, will create a range and allow the user to change the LDW sensitivity level within this range only.
- ② Move the scroll bar to choose the LDW activation speed.
- ③ The "Value" drop-down will display the default LDW sensitivity level which currently exists in the system. To change this value, open the drop-down and choose the desired value.

3.3 HMW



The screenshot shows the HMW configuration interface. It includes a header with a user icon and 'HMW' title. The main content area has three sections: 'Sensitivity' with a scroll bar (0.1 to 2.5) and three dropdowns (0.6, 0.9, 1.4); 'Repeatability HMW' with a scroll bar (0.1 to 2.5) and three dropdowns (0.1, 0.3, 0.5); and 'Threshold (sec)' with a scroll bar (1 to 10). Red circles and arrows indicate the steps for configuration: 1. Sensitivity scroll bar, 2. Sensitivity dropdowns, 3. Repeatability HMW scroll bar, 4. Repeatability HMW dropdowns, 5. Threshold scroll bar.

- ① Move the scroll bar to limit the HMW sensitivity level to a desired range.
 - By setting both min & max to the same value, HMW feature will be set to this specific timing.
 - Setting different values for min & max, will create a range and allow the user to change the HMW within this range only.

HMW Sensitivity level is measured in seconds and is available between 0.1 second up-to 2.5 seconds.

- ② By default, the existing HMW default value range will be checked. To change the default value, click the desired checkbox.

③ Reapable-HMW

Move the scroll bar to limit the R-HMW sensitivity level to a desired range.

- By setting both min & max to the same value, R-HMW feature will be set to this specific timing.
- Setting different values for min & max, will create a range and allow the user to change the R-HMW within this range only.

R-HMW Sensitivity level is measured in seconds and is available between 0.1 second up-to 2.5 seconds.

④ By default, the existing R-HMW default value range will be checked. To change the default value, click the desired checkbox.

⑤ Move the scroll bar and choose the R-HMW threshold level to a desired range.

R-HMW threshold level is measured in seconds and is available between 1 second, 5 seconds & 10 seconds.

NOTE →

When configure R-HMW in a system with FW older than 4.19.6 5.x, the new settings will take effect **ONLY** upon completion of OTA

3.4 Volume

3.4.1 General volume level




- By setting both min & max volume levels to the same value, the general volume level of the system will be set to this specific level and cannot be changed.
Locking this value to 0 will mute the system (critical alerts such as FCW, UFCW and PCW will still provide an audio alert at volume level 3).
- By setting different values for min & max, will create a range and limit the user to change the volume level within this range only.
- To change the default volume level, open the drop-down menu and choose the desired general volume level.
In case the default level is set less than 3, the critical alerts as mention above will still provide an audio alert at least at level 3.

3.4.2 LDW volume level



- By setting both min & max LDW volume level to the same value, LDW audio alert will be set to this specific volume level and cannot be changed.
Setting both values to 0 will mute the LDW volume alert (a visual alert will still be shown on the EyeWatch display unit).
- By setting different values for min & max, will create a range and limit the user to change the LDW volume level within this range only.
- To change the default LDW volume level, open the drop-down menu and choose the desired volume level.

3.4.3 HMW volume level

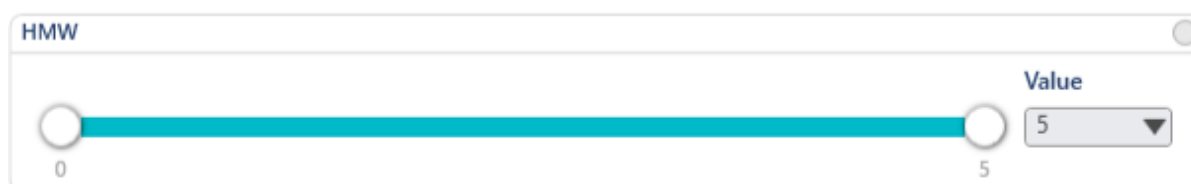

- By setting both min & max HMW volume level to the same value, HMW audio alert will be set to this specific volume level and cannot be changed.
- By setting different values for min & max HMW volume level, will create a range and limit the user to change the LDW volume level within this range only.
- To change the default HMW volume level, open the drop-down menu and choose the desired volume level.


3.5 SLI



- ① Move the scroll bar and choose to limit the SLI speed activation level to a desired range.
 - By setting both min & max to the same value, SLI feature will be set to this specific activation speed.
 - By setting different values for min & max, will create a range and limit the user to change the SLI within this range only.

SLI speed activation level is measured in Units and is available between 0-30 (km/h or MPH). 0 = Off, 1= at Speed sign, 5 and up = numerical unit above the allowed Speed sign)

- ② By default, SLI is disable. Open the drop-down to change the default value. Changing the default value is also available via the EyeWatch display unit.

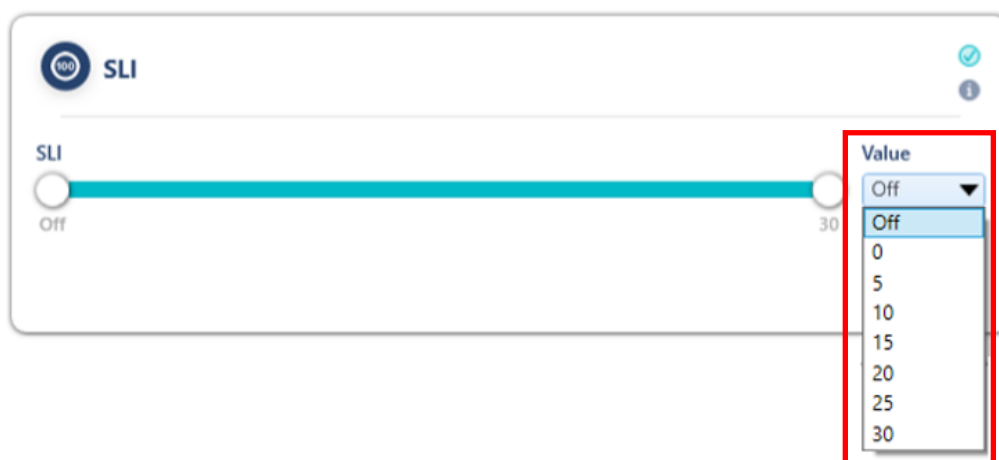

3.6 IHC



- ① By default, IHC is set to disable. Turn on to enable IHC feature.



- ② Turn on to activate the IHC feature. This option is also available to the driver using the advanced menu in the EyeWatch display unit.



- ③ Move the scroll bar and choose the IHC activation speed.
IHC activation speed is available at 25km/h, 35km/h, or 45km/h

NOTE →

IHC (Intelligent High-Beam Control) feature requires physical connection which have been made during the installation process.


For more information about IHC connection step, check the IHC manual which can be found at Mobileye FTP website.

3.7 Blinker Reminder




- ① By default, BR is set to disable (off). BR activation time can be set to the following values: off, 0.5sec, 1min, 1.5min, 2min, 3min, 4min and 5min.

Choose the default value from the BR value dropdown

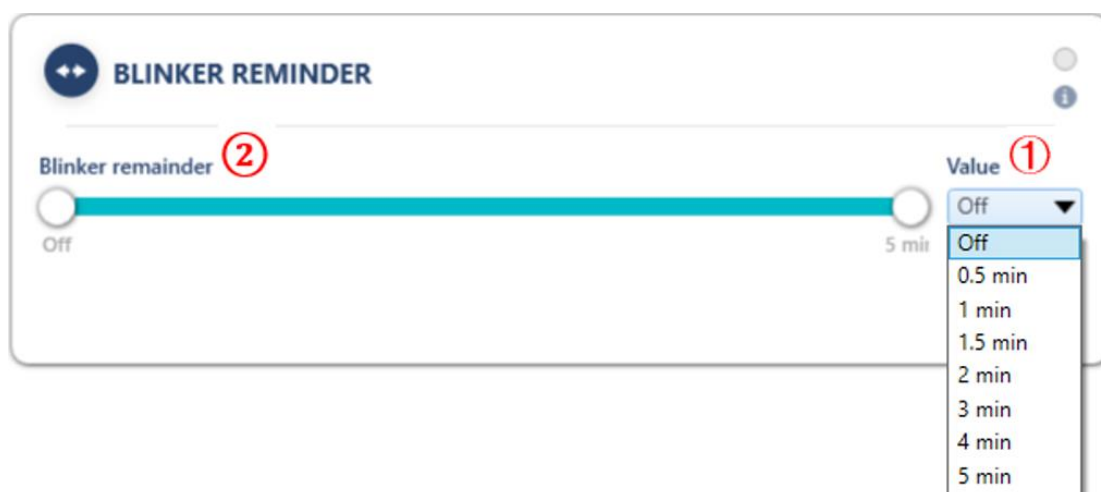

- ② Move the scroll bar and choose to limit the Blinker Reminder (BR) activation time to a desired range.
- By setting both min & max to the same value, BR feature will be set to this specific activation timing and cannot be changed.
 - Setting different values for min & max, will create a range and limit the user to change the BR within this range only.


3.8 System on/off

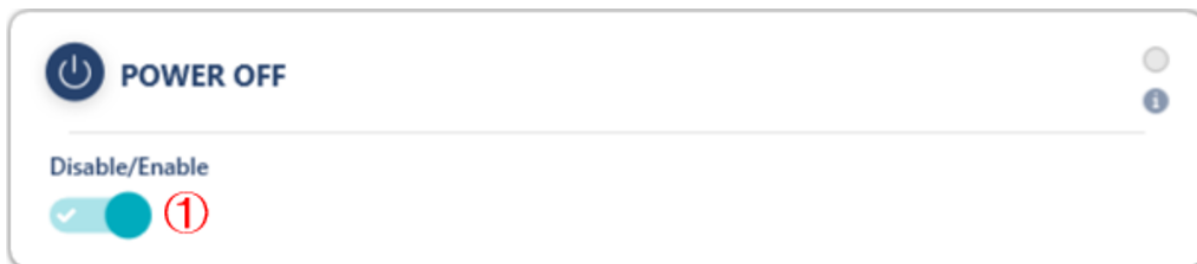

- ① By default, the system can be turned off by the driver (enabled mode).
Turn off to lock the power button and disable the option to turn off the system by the driver.



3.9 Pilot mode

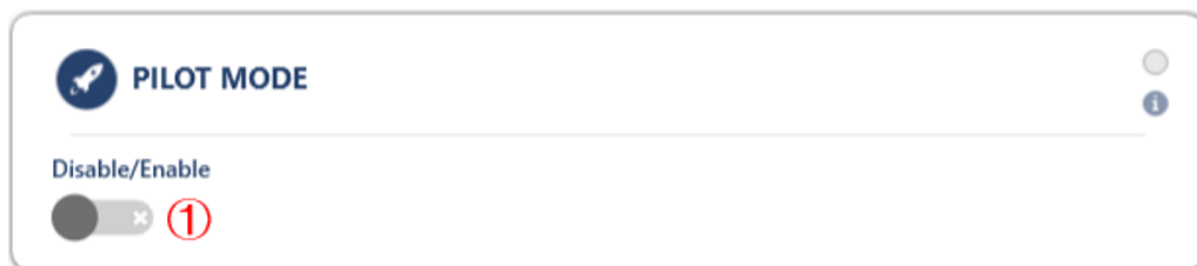

- ① turn on to activate the pilot mode.



Pilot mode will disable all visual and audio alerts.

Usually used for new project for assessment and analyzing.

3.10 Mute by AUX – police mode



- ① Enable to activate the police mode.



Police mode will mute all audio alerts when triggered (except for critical collision warnings)

3.11 Virtual Bumper



- ① By default, Virtual Bumper is set to 1.4. Virtual Bumper alerting distance can be set to the following values: 0, 1, 1.2, 1.4, 1.6, 1.8, 2, 2.5, 3, 3.5 and 4 (units are in meters).

Choose the default value from the Virtual Bumper value dropdown



Move the scroll bar and choose to limit the Virtual Bumper alerting distance to a desired range.

- By setting both min & max to the same value, Virtual Bumper feature will be set to this specific alerting distance and cannot be changed.

Setting different values for min & max, will create a range and limit the user to change the Virtual Bumper within this range only.

